

ALTRONIC RESEARCH, INC.

P.O. BOX 249

YELLVILLE, ARKANSAS 72687-0249

U.S.A.

MODEL 6725

COAXIAL LOAD RESISTOR



MODEL 6725
25KW AIR COOLED COAXIAL RESISTOR

LIMITED WARRANTY

We take pride in manufacturing products of the highest quality and we warrant them to the original purchaser to be free from defects in material and workmanship for the period of one year from date of invoice. Additionally, products of our manufacture repaired by us are warranted against defects in material and workmanship for a period of 90 days from date of invoice, with the provisions described herein.

Should a product, or a portion of a product of our manufacture prove faulty, in material or workmanship, during the life of this warranty, we hereby obligate ourselves, at our own discretion, to repair or replace such portions of the product as required to remedy such defect. If, in our judgment, such repair or replacement fails to be a satisfactory solution, our limit of obligation shall be no more than full refund of the purchase price.

This warranty is limited to products of our own manufacture. Equipment and components originating from other manufacturers are warranted only to the limits of that manufacturer's warranty to us. Furthermore, we shall not be liable for any injury, loss or damage, direct or consequential, arising out of the use, or misuse (by operation above rated capacities, repairs not made by us, or any misapplication) of the equipment. Before using, the user shall determine the suitability of the product for the intended use; and the user assumes all risk and liability whatsoever in connection therewith.

The foregoing is the only warranty of Altronic Research Incorporated and is in lieu of all other warranties expressed or implied.

Warranty returns shall first be authorized by the Customer Service Department and shall be shipped prepaid. **Warranty does not cover freight charges.**

TABLE OF CONTENTS

MODEL 6725

<u>SECTION</u>	<u>PAGE</u>
Warranty	3
Warnings and Precautions	6,7
Introduction	8
I. Description and Leading Particulars	
1-1 Purpose and Application of Equipment	8
1-2 Equipment Supplied	8
1-3 Equipment Required But Not Supplied	8
1-4 General Description	8
1-5 Electrical Description.....	9
1-6 Mechanical Description.....	9
1-7 General Principle of Operation.....	9
1-8 Operating and Adjustment Controls	9
1-9 Operator Training	10
II. Test Equipment and Special Tools	
2-1 Test Equipment Required.....	11
2-2 Special Tools Required	11
III. Preparation for Use and Reshipment	
3-1 Unpacking Equipment	12
3-2 Pre-Installation Inspection	12
3-3 Pre-Installation Test	12
3-4 Installation	12
3-5 Location	13
3-6 Mounting	13
3-7 Connections	13
3-8 Ducting	13
3-9 Adjustments	14
3-10 Preparation for Reshipment	14
IV. Theory of Operation	
4-1 General	15
4-2 Control Circuits.....	15

SECTION

PAGE

V. Maintenance

- 5-1 Cleaning..... 16
- 5-2 Lubrication 16
- 5-3 RF Circuit..... 17

VI. Diagrams

- 6-1 Outline and Dimensions..... 18
- 6-2 Schematic Diagram..... 19
- 6-3 Parts List 20

VII. Specifications 21

OPERATING TEMPERATURE WARNING

**CARE SHOULD BE TAKEN TO OPERATE UNIT BELOW
STATED MAXIMUM AMBIENT OPERATING TEMPERATURE.**

**OPERATION ABOVE RATED AMBIENT
TEMPERATURE MAY CAUSE MOTOR
THERMAL PROTECTION TO SHUT OFF FAN,
WHICH MAY CAUSE DAMAGE TO UNIT.**

**PROVISIONS ARE MADE TO TRIP THE INTERLOCK
IN THE EVENT OF OVERHEAT, BUT THE INTERLOCK
MUST BE PROPERLY CONNECTED TO THE RF SOURCE
FOR THIS FUNCTION TO OPERATE.**

**NEVER OPERATE WITH INTERLOCK
BYPASSED OR MALFUNCTIONING.
TO DO SO WILL VOID THE WARRANTY.**

PRECAUTIONS

⚠WARNING⚠

This equipment can start automatically. Do not attempt any service or parts replacement without first disconnecting all AC power and RF power. Failure to do so may result in serious or *fatal electrical shock*.

CAUTION

Do not block air grills or restrict airflow when ducting inlet and discharge air. Restrictions in airflow limit the load's ability to dissipate RF power and could damage and/or cause the unit to fail.

CAUTION

Do not apply more than rated power to unit. Damage will occur before thermal protectors can activate interlock circuit if large overloads are applied.

☠CAUTION☠

When using any cleaning solvents or solutions, assure that there is adequate ventilation to protect personnel from breathing any irritable or possibly toxic fumes.

INTRODUCTION

This handbook was prepared for technical personnel as an aid in understanding and performing installation, service and maintenance procedures for the OMEGALINE® Model 6725 Air-Cooled Coaxial Load. Personnel are considered to be skilled if they have the necessary knowledge and practical experience of electrical and radio engineering to appreciate the various hazards that can arise from working on radio transmitters, and to take appropriate precautions to ensure the safety of personnel.

SECTION I

DESCRIPTION AND LEADING PARTICULARS

1-1. Purpose and Application of Equipment. The OMEGALINE® Model 6725 Coaxial Load is designed to safely dissipate a maximum of 25,000 watts of electrical energy over a frequency range of DC to 240 MHz.

1-2. Equipment Supplied. The Model 6725 Coaxial Load is supplied with standard RF connectors. Their designations are:

EIA Swivel flange:	Model 6725E3
Unflanged flush:	Model 6725F3
Unflanged Recessed:	Model 6725R3

The standard power supply voltages and their designators after the Model # are:

110-120VAC, single phase, 50/60 Hz
208-230VAC, single phase, 50/60 Hz

1-3. Equipment Required But Not Supplied. The Model 6725 Coaxial Load is complete as supplied, but the user must furnish AC Mains input, RF input, interlock control cable and ground cable appropriate to each installation.

1-4. General Description. The Model 6725 Coaxial Load is enclosed in a single, aluminum case which is painted with a durable acrylic finish. Power connection is made through a multi-contact, IEC style connector on the rear panel of the enclosure. This panel also contains a 4-screw barrier terminal strip for connection of the interlock circuit and a 1/4-20 UNC-2B stud for attachment of the ground. The RF connector is located in the center of the top panel.

1-5. Electrical Description. The Model 6725 contains a 50 ohm non-reactive resistor assembly capable of dissipating 25,000 watts of applied electrical energy at sea level at frequencies between DC and 240 MHz with a maximum VSWR of 1.15 to 1. No provisions are made for tuning the resistor assembly and all operating controls relate to the operation of the blower assembly. The blower control circuit consists of three switches wired in parallel to control the blower motor contactor. Power is supplied to this contactor and to the "Blower On" lamp whenever the equipment is attached to the correct power supply and the main power switch is "ON" or when one of the fan thermostats senses a temperature equal to or greater than 120° ($\pm 7^\circ$)F. The transmitter interlock circuit consists of two thermal switches wired in series to control the interlock relay. Power is supplied to this relay whenever the equipment is attached to the correct power supply and neither of the overtemperature thermal switches senses a temperature equal to or greater than 250° ($\pm 7^\circ$)F. A lamp is provided to indicate when one or more of the over-temperature switches opens. It is labeled "OVERHEAT", indicating a change in state of the interlock.

1-6. Mechanical Description. The Model 6725 RF Coaxial Load is a 50 ohm non-reactive resistor assembly which is cooled by forced ambient air. The blower assembly is a 1/3 HP direct-drive centrifugal blower. The blower moves air from floor level into a closed plenum surrounding the resistor assembly. Air then enters the resistor assembly and flows downward through it to the transition duct and then out of the enclosure via the discharge grill. This places the RF input connector at the coolest point in the air stream and affords exceptionally quiet operation.

1-7. General Principle of Operation. After ascertaining that the Model 6725 is connected to the correct power supply, connect the transmitter interlock circuit and RF source. Turn the main power switch "ON" to start the fan and enable transmitter. Operate transmitter as desired. To stop operation it is necessary to first turn off the transmitter, then the main power switch on the Model 6725. The fan may continue to run for some time. This depends upon the power level at which the load was operating and upon the ambient air temperature. This feature is necessary to prevent damage to the load. The Model 6725 can be operated in a "Standby" or "Reject" mode with the blower off. Current draw in this mode is 60 milliamperes. To operate in this mode, connect the unit as before and leave the main power switch on the front panel "Off". It is highly recommended that the normally open pair on the interlock terminal board be used to control a user-supplied alarm circuit. This pair will close on power failure or overheat and the alarm, if independent of the AC power supply for the unit, will notify the operator of a fault.

1-8. Operating and Adjustment Controls. The only operating control is the main power switch. No field adjustments are necessary or possible.

1-9. Operator Training. The operator of this equipment must have the following skills/knowledge:

- An understanding of the purpose of the equipment;
- An understanding of the principles of operation of the equipment;
- An understanding of the normal operating procedures for the equipment;
- An understanding of the normal and abnormal indications which may be presented at the control point;
- The proper procedures for starting, using and stopping the equipment under normal conditions;
- The proper procedure for stopping the equipment under abnormal or emergency conditions;
- The proper procedure to lock out and mark controls prior to allowing or commencing maintenance on the equipment;
- The proper procedure to obtain clearance to remove lockouts and out-of-service marks and return the equipment to normal service.

SECTION II

TEST EQUIPMENT AND SPECIAL TOOLS

2-1. Test Equipment Required. No test equipment is required for routine maintenance. In some circumstances, it may be desirable to determine the temperature differential (outlet air minus inlet air) and ambient air temperature which the equipment is experiencing. We recommend the John B. Fluke Mfg. Co. Model 52 or equivalent instrument for this function.

2-2. Special Tools Required. Although no non-standard tools are required for routine maintenance, we recommend the technician have the following specialized tools available:

Torx T-15 driver

Tee handle hex key, 7/32" bit

Power screwdriver with 3/32" hex key & torx T-15 bit

SECTION III

PREPARATION FOR USE AND RESHIPMENT

3-1. Unpacking. The units should be handled and unpacked with care. Inspect outer cartons for evidence of damage during shipment. Claims for damage in shipment must be filed promptly with the transportation company involved. No internal packaging or bracing is used for shipments and the units should not rattle when being unpacked.

3-2. Pre-installation inspection. Conduct a thorough inspection of the units, paying particular attention to the following items:

- Screws in place and tight.
- All panels and grills free of dents and scratches.
- AC input receptacle visually OK.
- Interlock terminal strip visually OK.
- RF connector visually OK.

While inspecting RF connector, measure D.C. resistance of the unit by reading from the center conductor to the outer conductor. Compare this reading with that listed in the specification sheet at the end of this manual. Reading should be ± 1 ohm. If not, consult factory.

3-3. Pre-installation Tests. Prior to installation, connect the load to AC Mains power for the following tests:

- a. Read data plate on lower rear panel of resistor enclosure and connect to a suitable source of AC power.
- b. Turn main switch on and check for quiet blower operation.
- c. Connect an ohmmeter or a battery operated test lamp across the normally closed terminal pair on the interlock terminal board.
- d. Turn the main power switch off, observing the indicator (ohmmeter or test lamp). It should remain as it was.
- e. Disconnect the AC power from the unit. The indicator should change state (terminals open).

3-4. Installation. The Model 6725 must be installed in a location convenient for servicing. Consideration should be given to adequate accessibility for maintenance and unit replacement. No attempt is made in this handbook to present complete installation instructions, since physical differences in plant will determine the installation procedure. General guidelines are outlined in subsequent paragraphs.

3-5. Location. The location selected for the Model 6725 should be dry, free of excessive dust and have an ambient temperature below 110°F(40°C). The room should be well-ventilated to prevent excessive temperature rise and consequent derating of the unit. The maximum dissipation of the unit is 25,000 watts. This is equal to 85,379 Btu/hr, which ordinarily will be ducted out of the building envelope.

The unit should be oriented to provide a short, direct duct run in order to avoid high static pressure and loss of cooling efficiency. The assistance of a competent heating and air conditioning installer will help avoid over or under-specifying the duct system.

3-6. Mounting. The Model 6725 is designed to be a free-standing device. It rests on four adjustable-length leveling feet..

CAUTION!

THE UNIT SHOULD BE ATTACHED TO THE PROPER AC POWER SUPPLY WITH INTERLOCK CONNECTED WHENEVER THE RF CONNECTOR IS ATTACHED TO THE SOURCE. INADVERTENT APPLICATION OF RF POWER TO THE UNIT WITHOUT AC POWER MAY DAMAGE OR DESTROY THE RESISTOR ASSEMBLY.

3-7. Connections. There are three connectors on the Model 6725: the RF connector (3 1/8 inch EIA swivel flange or unflanged), the AC power supply and the transmitter interlock.

- a. The RF connector is on the top panel of the unit. Connect to the appropriate RF line from the transmitter.
- b. The AC power supply connector is an IEC style female power connector located on the rear panel of the enclosure.
- c. The transmitter interlock is attached to the normally closed terminals of the 4-position terminal strip located on the rear panel of the enclosure.

The terminals are closed whenever AC power is supplied to the unit and no overheat condition exists. The normally open terminals are isolated from the normally closed terminals and are provided for an alarm circuit for reject (standby) mode operation or remote installations.

3-8. Ducting. In many installations it will be necessary to duct the discharge air from the Model 6725 to the exterior of the building. In some installations it will also be necessary to supply inlet air from outside of the climate controlled portion of the building. The discharge air flow is approximately 600 SCFM at a maximum temperature of 250° F. Due to the high temperatures involved, non-metallic duct materials should not be used.

Attaching a discharge duct to the unit is easily accomplished:

- Remove the 10 torx head screws attaching the discharge grill.
- Replace the discharge grill with a discharge air duct adapter.

Suitable ducting can then be attached to the adapter. This duct should be as short as possible to minimize back pressure. Design of the ducting and wall or ceiling penetrations should be referred to a competent heating and air conditioning firm.

"Make-up air" is a ventilation term used to indicate the supply of outdoor replacement air to a building in a controlled manner. It may be provided for the Model 6725 by ducting into the room or by extending a supply duct to either intake grill of the blower enclosure and installing a blanking plate on the other grill.

Makeup air will enter the building to equal the volume actually exhausted, whether or not provision is made for this replacement. However, the actual exhausted volume may not equal the design volume unless an adequate supply is provided.

3-9. Adjustments. No field adjustments are necessary or possible.

3-10. Preparation For Reshipment. No special measures are required to prepare the Model 6725 for reshipment. Care must be taken to protect the RF connector and to immobilize the swivel flange. Packaging should provide protection against abrasion and impact. Special containers are available from the factory. Please inquire.

SECTION IV

THEORY OF OPERATION

4-1. General. The Model 6725 contains a 50 ohm non-reactive resistor assembly (20 @ 250 ohms in series-parallel) which is cooled by forced air supplied by a centrifugal blower assembly. Control of the blower and of the transmitter interlock circuit is accomplished with a single rocker switch and five thermal switches.

4-2. Control Circuits. There are 2 control circuits in the Model 6725. One circuit controls the blower and the other controls the transmitter interlock circuit.

The blower control circuit derives its power from the 26VAC control transformer. Two thermal switches and one rocker switch are connected to AC Control Line 1. Both thermal switches are SPNO and connect to blower contactor "RY1" terminal 0, as does the SPST rocker switch. Blower contactor "RY1" terminal 1 connects to AC Control Line 2. The blower indicator lamp is connected in parallel with the contactor coil.

The transmitter interlock circuit also derives its power from the 26VAC control transformer. Two SPNC thermal switches are connected in series from Control Line 1 to interlock relay "RY2" terminal 13. The overheat lamp is connected from Line 1 to interlock relay "RY2" terminal 13. Interlock relay "RY2" terminal 14 is connected to Control Line 2.

Interlock relay terminals 5 and 6 are paralleled and are connected to TB1-4. Interlock relay terminals 9 and 10 are paralleled and are connected to TB1-3. This terminal pair is normally closed when AC power is supplied to the unit. Interlock relay terminals 11 and 12 are paralleled and are connected to TB1-2. Interlock relay terminals 3 and 4 are paralleled and are connected to TB1-1. This terminal pair is normally open when AC power is supplied to the unit.

SECTION V

MAINTENANCE

WARNING!!

***PERSONNEL WORKING ON THIS LOAD MUST
BE CONSIDERED SKILLED AS DEFINED BY
EN60215 SECTION 3.1 AND APPENDIX D***

BEFORE PERFORMING ANY MAINTENANCE:

- 1. DISCONNECT POWER AND ALLOW MOTOR TO COME TO A FULL STOP.**
- 2. DISCONNECT RF CONNECTOR ASSEMBLY AND LOCK OUT TRANSMITTER OPERATING CONTROLS.**
- 3. DISCONNECT TRANSMITTER INTERLOCK LINE.**

***FAILURE TO FOLLOW THESE DIRECTIONS
MAY CAUSE FATAL ELECTRICAL SHOCK!***

5-1. Cleaning. The enclosure of the Model 6725 is finished with an acrylic finish or other durable coating system. It should be cleaned with a neutral plastic and glass cleaner such as Windex or Glass Plus. The RF connector should be cleaned with a non-residue contact cleaner such as Miller-Stephenson MS-171/CO2.

Remove dirt accumulations from the fan and motor by vacuuming. Do not use solvents or an air jet, as these can damage the motor. Remove dirt and dust accumulations from the grills and resistor assembly with an air jet and a soft brush.


5-2. Lubrication. Lubricate motor with 10-30 drops of SAE30 motor oil annually.

5-3. RF Circuit. The RF circuit does not require any periodic maintenance and the only repairs possible are the replacement of parts in the connector, quick-step or support portions of the resistor assembly or the replacement of resistors.

CAUTION!

Take care when tightening the ¼-20 x 2” screws securing the lower resistor bracket to the flex panel. Overtightening can fracture the resistors. The resistors are hard, brittle ceramic material. Avoid impact and excessive force when installing or removing them.

6-1 OUTLINE AND DIMENSIONS

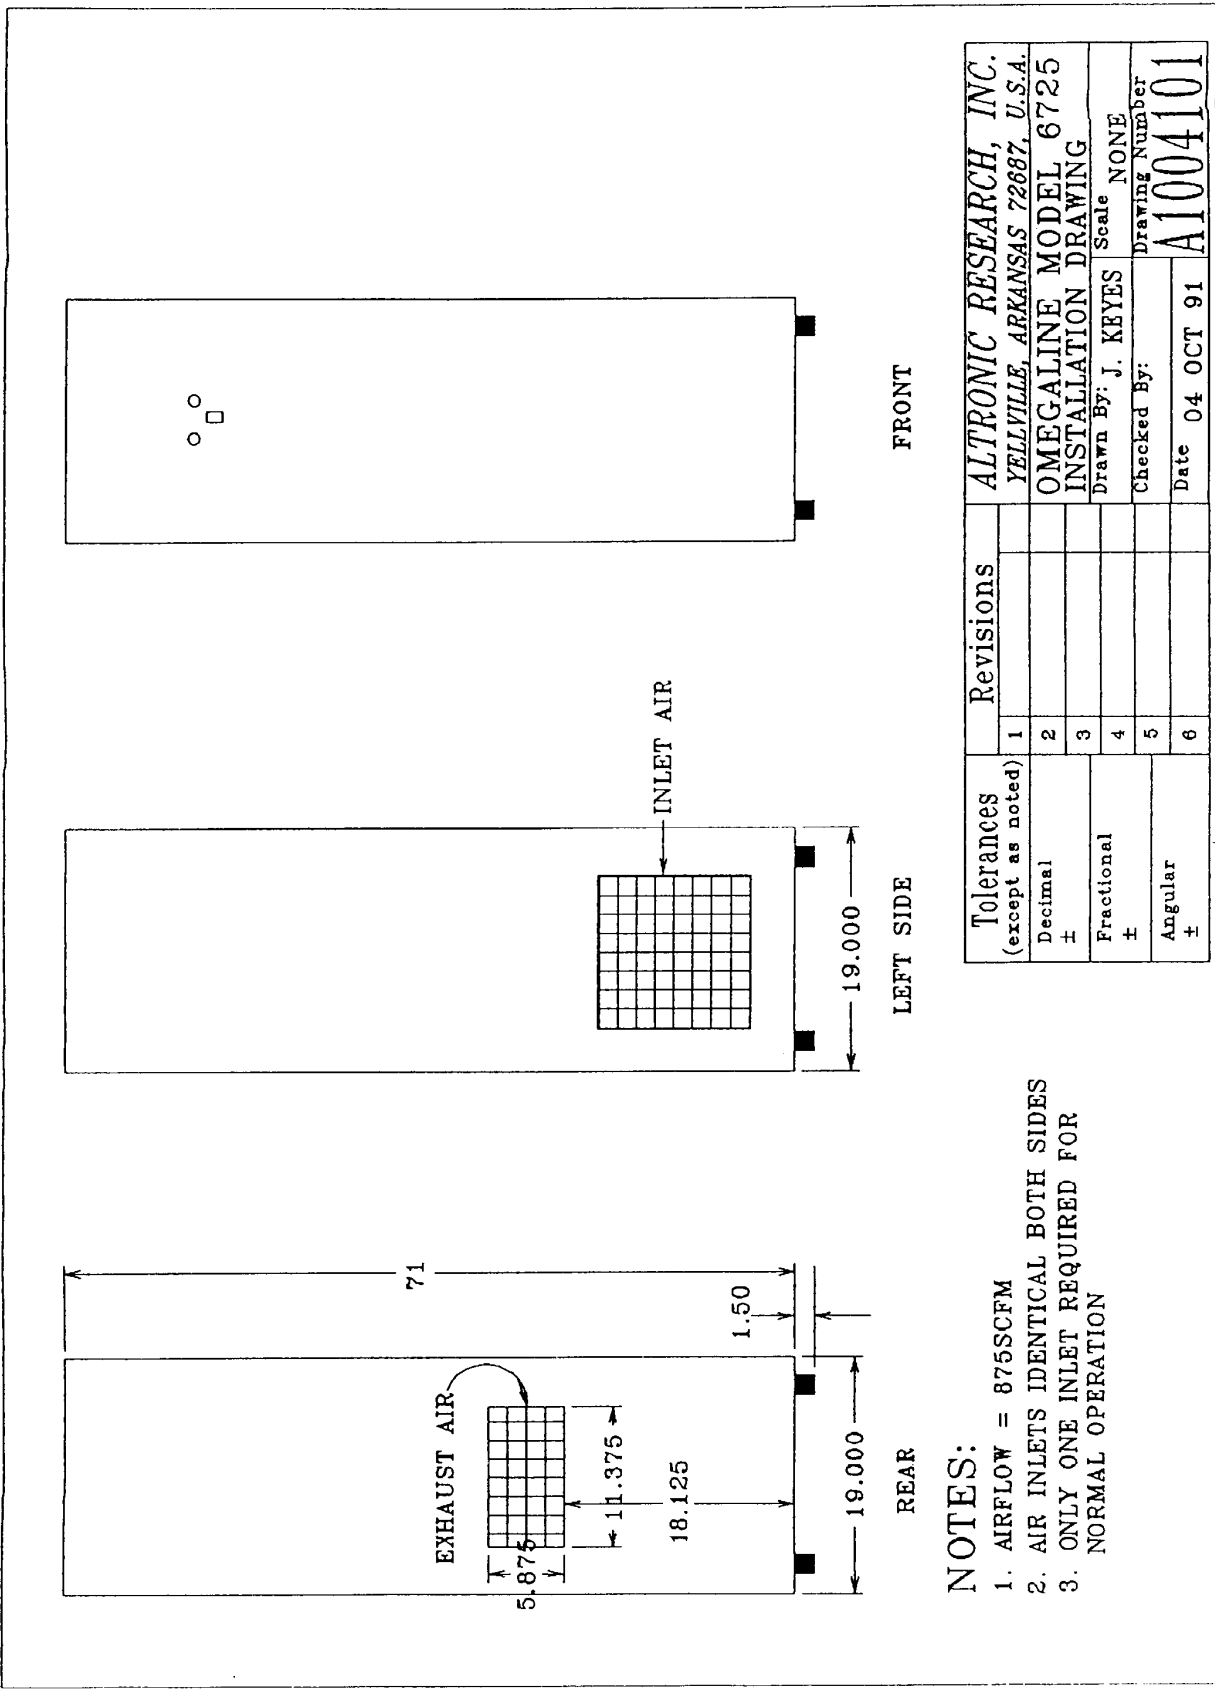

NOTES:

- 1. AIRFLOW = 875SCFM
- 2. AIR INLETS IDENTICAL BOTH SIDES
- 3. ONLY ONE INLET REQUIRED FOR NORMAL OPERATION

Tolerances (except as noted)		Revisions	
Decimal	±	1	
Fractional	±	2	
Angular	±	3	
		4	
		5	
		6	

ALTRONIC RESEARCH, INC. YELLVILLE, ARKANSAS 72687, U.S.A.	
OMEGALINE MODEL 6725 INSTALLATION DRAWING	
Drawn By: J. KEYES	Scale: NONE
Checked By:	Drawing Number
Date 04 OCT 91	A1004101

REPLACEMENT PARTS LIST

MODEL 6725

(CONSULT FACTORY)

SPECIFICATIONS

MODEL 6725

Impedance.....>50 ohms nominal

VSWR @ DC to 240MHz..... >1.15:1 max.

Connectors:

Model 6725E3>3-1/8" EIA swivel flange

Model 6725F3>3-1/8" Unflanged flush

Model 6725R3>3-1/8" Unflanged recessed

Power Rating @ Sea Level.....>25 KW

Frequency Range>DC to 240 MHz

Cooling Method.....>Forced Air Ductable

Ambient Temperature.....> -30 C to 43 C

Fan Assembly>1/3 hp direct-drive centrifugal

AC Power Requirements:

115 VAC @ 6 Amp., 1 phase, 60 Hz

230 VAC @ 3 Amp., 1 phase, 60 Hz

230 VAC @ 4 Amp., 1 phase, 50 Hz

Finish>Beige Splatter

Serial No. _____ Frequency _____ Resistance _____ dBA@3ft < 80dBA

Model _____ Inspected by _____ Date _____



CRAFTED WITH PRIDE IN THE U.S.A.



**Model 6725
Access Panels Displaced**



Resistor Assembly